
Contents

1	Repairing a Boundary Mesh	1-1
	Introduction	1-1
	Prerequisites	1-1
	Preparation	1-2
	Step 1: Reading and Displaying the Boundary Mesh	1-3
	Step 2: Check for Free and Unused Nodes	1-5
	Step 3: Repair the Boundary Mesh	1-6
	Step 4: Use the Rezoning Feature	1-9
	Step 5: Improve the Boundary Mesh	1-11
	Step 6: Check the Skewness Distribution of the Boundary Mesh	1-12
	Step 7: Repairing the Boundary Mesh Further	1-13
	Step 8: Generate a Multiple Region Volume Mesh	1-24
	Step 9: Check the Volume Mesh	1-25
	Step 10: Check and Save the Volume Mesh	1-26
	Summary	1-27
2	Tetrahedral Mesh Generation	2-1
	Introduction	2-1
	Prerequisites	2-1
	Preparation	2-1
	Step 1: Read and Display the Boundary Mesh	2-2
	Step 2: Generate the Mesh using the Skewness-Based Refinement Method	2-5
	Step 3: Generate the Mesh using the Skewness-Based Refinement Method and a Size Function	2-10

Step 4: Generate the Mesh using the Advancing Front Refinement Method and a Size Function	2-12
Step 5: Examine the Effect of the Maximum Cell Volume	2-15
Step 6: Examine the Effect of the Growth Factor	2-16
Step 7: Generate a Local Refinement in the Wake of the Car	2-18
Step 8: Check and Save the Volume Mesh	2-22
Summary	2-22
3 Zonal Hybrid Mesh Generation	3-1
Introduction	3-1
Prerequisites	3-1
Preparation	3-2
Step 1: Read and Display the Mesh	3-3
Step 2: Merge the Free Nodes on the Tri/Quad Border	3-6
Step 3: Check the Skewness Distribution of the Boundary Mesh	3-7
Step 4: Generate the Tetrahedral Mesh Using Pyramids to Transition Between the Hexahedral and Tetrahedral Mesh	3-8
Step 5: Extend the Mesh Using Prisms	3-14
Step 6: Check and Save the Volume Mesh	3-20
Step 7: Generate the Tetrahedral Mesh Using a Non-Conformal Transition Between the Hexahedral and Tetrahedral Mesh	3-23
Summary	3-27
4 Viscous Hybrid Mesh Generation	4-1
Introduction	4-1
Prerequisites	4-1
Preparation	4-2
Step 1: Read and Display the Boundary Mesh	4-3
Step 2: Check for Free and Unused Nodes	4-5
Step 3: Check the Quality of the Surface Mesh	4-6

Step 4: Set Parameters for Prism Layer Shrinkage and Manual Tetrahedral Meshing	4-7
Step 5: Set Parameters for Ignoring Prism Layers and Automatic Meshing	4-19
Summary	4-24
5 Hexcore Mesh Generation	5-1
Introduction	5-1
Prerequisites	5-1
Preparation	5-2
Step 1: Read and Display the Mesh	5-3
Step 2: Check and Improve the Skewness of the Surface Mesh	5-5
Step 3: Repair the Boundary Mesh	5-6
Step 4: Generate the Tetrahedral Mesh	5-8
Step 5: Generate the Hexcore Mesh	5-11
Step 6: Examine the Effect of the Buffer Layers on the Hexcore Mesh	5-13
Step 7: Automatically Generate the Hexcore Mesh with Prism Layers and a Local Refinement Region	5-16
Summary	5-22
6 Generating the Hexcore Mesh Upto Domain Boundaries	6-1
Introduction	6-1
Prerequisites	6-1
Preparation	6-1
Step 1: Read and Display the Boundary Mesh	6-2
Step 2: Delete the Outer Box Boundaries	6-4
Step 3: Set the Hexcore Meshing Parameters	6-5
Step 4: Automatically Generate the Hexcore Mesh Upto the Boundaries with Prism Layers	6-7
Summary	6-15

7	Using the Boundary Wrapper	7-1
	Introduction	7-1
	Prerequisites	7-1
	Preparation	7-2
	Step 1: Read and Display the Mesh	7-3
	Step 2: Perform Pre-Wrapping Operations to Close Holes in the Geometry	7-4
	Step 3: Initialize the Surface Wrapper	7-12
	Step 4: Check the Region to be Wrapped	7-13
	Step 5: Refine the Main Region	7-18
	Step 6: Close Small Holes Automatically	7-19
	Step 7: Wrap the Main Region	7-23
	Step 8: Capture Features	7-24
	Step 9: Post Wrapping Operations	7-28
	Step 11: Create the Tunnel	7-38
	Step 12: Generate the Volume Mesh	7-39
	Step 13: Improve the Volume Mesh	7-41
	Step 14: Separate the Tunnel Inlet and Outlet	7-42
	Summary	7-43
8	Cavity Remeshing	8-1
	Introduction	8-1
	Prerequisites	8-1
	Preparation	8-1
	Case A. For a Tetrahedral Mesh	8-2
	Case B. For a Hybrid Mesh (Tetrahedra and Prisms) Having a Single Fluid Zone	8-11
	Case C. For a Hybrid Mesh (Tetrahedra and Prisms) Having Multiple Fluid Zones	8-21
	Case D. For a Hexcore Mesh	8-24
	Summary	8-29