

---

# Index

---

/file/write-boundaries, 6-5

TGrid

    dual process, 2-3

accessing manuals, 1-5

active cell zones, 11-24, 13-28, 14-4

adaptive angle criteria, 7-42

Annotate panel, 14-49

annotated text, 14-47

ANSYS, 6-11, A-1, A-5

    export, 6-17

append mesh files, 6-3

ARIES, A-6

arrow keys, C-1

aspect ratio, 15-9

    cell, 14-20, 15-5, 15-6

    face, 14-17, 15-3

    plotting cell distribution, 14-19

    plotting face distribution, 14-17

Auto Mesh panel, 9-12

Auto Node Move panel, 13-20

automatic

    mesh generation

        hybrid meshes, 11-5

    tri/tet meshing, 11-2

axes, 14-21

Axes - Histogram panel, 14-22

axis direction method, 7-81

booleans, 5-5

boundary

    cell size, 15-6

    cell skewness, 15-6

    closeness, 11-22

    features, 7-42

    layer, 9-2, 9-5

manipulating, 7-2

mesh, 7-1

    examining, 4-3

    modifying, 7-14

    quality, 15-3

    refinement, 7-35

    repair, 7-14

nodes, 7-2

periodic, 7-89

refinement, 7-35

remeshing, 7-53

repair, 7-14

separation, 7-63

wrapper, 8-1

wrapping, 8-1

zones, 7-74

    changing type, 7-74

    intersecting, 7-5

    manipulating, 7-74

    projecting, 7-69

    remeshing, 7-53

    renaming, 7-75

    rotating, 7-76

    scaling, 7-76

    separating, 7-63

    translating, 7-76

Boundary Improve panel, 7-32

Boundary Refinement Region panel, 7-40

Boundary Wrapper panel, 8-30

boundary zones

    copying, 7-75

    creating new, 7-75

    deleting, 7-75

    merging, 7-75

Boundary/Create/Bounding Box..., 7-78

- Boundary/Create/Cylinder..., 7-85
- Boundary/Create/Periodic..., 7-89
- Boundary/Create/Plane Surface..., 7-81
- Boundary/Create/Swept Surface..., 7-87
- Boundary/Feature..., 7-42
- Boundary/Intersect..., 7-5
- Boundary/Merge Nodes..., 7-2
- Boundary/Mesh/Improve..., 7-32
- Boundary/Mesh/Refine..., 7-35
- Boundary/Mesh/Triangulate..., 7-62
- Boundary/Modify..., 7-14
- Boundary/Remesh..., 7-53
- boundary/remesh/triangulate, 9-7
- Boundary/Separate..., 7-63
- Boundary/Zone/Project..., 7-69
- Boundary/Zones..., 7-74
- bounding box
  - creating, 7-78
- Bounding Box panel, 7-80
- Bounding Frame panel, 14-44
- browse, 3-7
- buttons, 3-10
  
- CAD import, 6-11
- Camera Parameters panel, 14-33
- cancelling, 3-5
  - a display operation, 3-15
- cap faces, 9-16, 10-11, 10-12
- capabilities of TGrid, 1-4
- captions, 14-27
  - editing, 14-49, E-7, E-11
- Cavity Remesh panel, 13-24
- cell
  - aspect ratio, 14-20, 15-5, 15-8
  - degenerate, 2-2, 13-6
  - distribution, 14-19
  - quality, 14-8, 14-20, 15-5, 15-8
  - size, 14-8, 15-5
    - change in, 15-5, 15-8
  - skewness, 11-22, 14-8, 14-20, 15-5
  - smoothness, 15-8
  - zones, 13-26
    - active, 11-24, 13-28, 14-4
    - changing type, 13-29
    - copying, 13-27, 13-29
    - creating new, 13-29
    - deleting, 13-29
    - merging, 13-30
    - moving, 13-27
    - preserving, 11-1
    - renaming, 13-30
    - rotating, 13-30
    - scaling, 13-30
    - translating, 13-30
- Cell Distribution panel, 14-20
- CGNS, 6-11
- character strings, 5-5
- check box, 3-10
- checking
  - mesh files, 4-11
- checking the mesh, 13-37
- child node, 10-18
- clearing a mesh, 13-37
- clustering, 9-9, 15-9
- collapsing
  - edges, 7-17
  - faces, 7-17
  - nodes, 7-17
- colors, 14-23, 14-30
- compressed files, 6-6
- console, 2-2, 3-2
- conventions used in this manual, UTM-4
- copying
  - boundary zones, 7-75
- Cortex, 5-4
- CPU time, 2-6
- Create Boundary Zone panel, 7-27
- creating edge loops, 7-53
  - angle criteria
    - adaptive angle, 7-42
    - fixed angle, 7-42
  - face seec approach, 7-43
  - face zone approach, 7-43
- customizing
  - GUI, 3-17
- .cxl layout file, 6-24
- cylinder

- creating, 7-85
- Cylinder panel, 7-86
- degenerate cells, 2-2, 13-6
- Delaunay
  - violation, 7-32
- deleting
  - boundary zones, 7-75, 9-9
  - cell zones, 13-29
  - dead zones, 7-92, 13-29
  - faces, 7-16, 7-29
  - isolated nodes, 7-5
  - nodes, 7-16, 7-29, 7-75
  - refinement regions, 11-24
  - the mesh, 13-37
  - unused boundary faces, 7-92
- dialog box, 3-4
- dihedral angle, 15-13
- display, 14-1
  - cell size, 14-19
  - colors, 14-13
  - face size, 14-17
  - grid, 14-2
  - magnifying, 14-46
  - mesh, 14-2
  - options, 14-24
  - properties, 14-40
  - quality distribution, 14-17, 14-19
  - rotating, 14-46
  - styles, 14-15
  - translating, 14-46
- Display Grid panel, 14-4
- Display Options panel, 14-24
- Display Properties panel, 14-41
- Display/Annotate..., 14-49
- Display/Grid..., 14-4
- Display/Lights..., 14-36
- Display/Mouse Buttons..., 14-45
- Display/Mouse Probe..., 14-47
- Display/Options..., 14-24
- Display/Plot/Cell Distribution..., 14-19
- Display/Plot/Face Distribution..., 14-17
- Display/Scene..., 14-38
- Display/Selection Helper..., 14-51
- Display/Views..., 14-30
- domain files, 6-10
- domains, 11-1, 13-33, E-5
- Domains panel, 13-34
- drop-down list, 3-14
- dual process build, 2-3
- duplicate
  - faces, 11-25
  - nodes, 7-2, 11-25
- edge
  - collapsing, 7-17
  - loop, 7-53
    - creating, 7-42
    - criteria, 7-66
    - face seed approach, 7-43
    - face zone approach, 7-43
    - modifying, 7-46
  - splitting, 7-18
  - swapping, 7-19, 13-3
- edge ratio, 15-12
- Error dialog box, 3-4
- error messages, 3-4
- exit, 6-24
- exiting, 6-24
- export polyhedral cells, 3-8
- extrusion, 10-15
- face
  - aspect ratio, 14-17, 15-3
  - collapsing, 7-17
  - creation, 7-15
  - deleting, 7-75
  - deletion, 7-16
  - distribution, 14-17
  - duplicate, 11-25
  - free, 14-5
  - handedness, 10-41, 13-37
  - left-handed, 10-41, 13-37, 14-6
  - normals, 7-76, 10-3, 14-10
  - projecting, 7-69
  - quality, 14-6, 14-17, 15-3
  - remeshing, 7-53
  - rezoning, 7-17

- separation, 7-63
- size, 14-6, 15-3
  - change in, 15-3
- skewness, 14-6, 14-17, 15-3
- slitting, 7-93
- splitting, 7-19
- swapping, 13-3
- unmeshed, 14-6, 15-1
- Face Distribution panel, 14-17
- face warp, 15-13
- Facted Stitch panel, 7-60
- feature angle criteria, 7-65
- Feature Modify panel, 7-49
- FIDAP, 6-13
- file
  - write boundaries, 6-5
- file/append-mesh, 6-4
- file/append-meshes-by-tmerge, 6-3
- file/export/ansys, 6-17
- File/Export/ANSYS..., 6-17
- file/export/hypermesh, 6-16
- File/Export/HYPERMESH..., 6-16
- file/export/nastran, 6-16
- File/Export/NASTRAN..., 6-16
- file/export/patran, 6-16
- File/Export/PATRAN..., 6-16
- file/export/stl, 6-17
- File/Hardcopy..., 6-17
- file/import-patran-surf-mesh, 6-12
- file/import-patran-vol-mesh, 6-12
- File/Import/ANSYS prep7/cdb/Surface..., 6-10
- File/Import/ANSYS prep7/cdb/Volume..., 6-10
- file/import/ansys-surf-mesh, 6-11
- file/import/ansys-vol-mesh, 6-11
- file/import/cgns-surf-mesh, 6-11
- file/import/cgns-vol-mesh, 6-11
- File/Import/CGNS/Surface..., 6-10
- File/Import/CGNS/Volume..., 6-10
- File/Import/FIDAP neutral/Surface..., 6-10
- File/Import/FIDAP neutral/Volume..., 6-10
- file/import/fidap-surf-mesh, 6-13
- file/import/fidap-vol-mesh, 6-13
- File/Import/Fluent 2D Mesh..., 6-3
- File/Import/Fluent 3D Mesh..., 6-3
- file/import/fluent-2d-mesh, 6-3, E-1
- file/import/fluent-3d-mesh, 6-3, E-2
- File/Import/GAMBIT neutral/Surface..., 6-10
- File/Import/GAMBIT neutral/Volume..., 6-10
- file/import/gambit-surf-mesh, 6-13
- file/import/gambit-vol-mesh, 6-13
- File/Import/HYPERMESH Ascii/Surface..., 6-10
- File/Import/HYPERMESH Ascii/Volume..., 6-10
- file/import/hypermesh-surf-mesh, 6-13
- file/import/hypermesh-vol-mesh, 6-13
- File/Import/IDEAS universal/Surface..., 6-10
- File/Import/IDEAS universal/Volume..., 6-10
- file/import/ideas-surf-mesh, 6-12
- file/import/ideas-vol-mesh, 6-12
- file/import/nastran-surf-mesh, 6-12
- file/import/nastran-vol-mesh, 6-12
- File/Import/NASTRAN/Surface..., 6-10
- File/Import/NASTRAN/Volume..., 6-10
- File/Import/Options..., 6-14
- File/Import/PATRAN neutral/Surface..., 6-10
- File/Import/PATRAN neutral/Volume..., 6-10
- file/import/stl, 6-13
- File/Import/STL..., 6-10
- file/read-boundary-mesh, 6-2
- file/read-case, 6-3
- file/read-domains, 6-10
- file/read-journal, 6-9
- file/read-mesh, 6-2, E-1
- file/read-meshes-by-tmerge, 6-3
- file/read-multi-bound-mesh, 6-2
- file/read-multiple-case, 6-3
- file/read-multiple-mesh, 6-3
- File/Read/Boundary Mesh..., 6-2
- File/Read/Domains..., 6-10

- File/Read/Journal..., 6-8
- File/Read/Mesh..., 6-2
- File/Save Layout, 6-24
- file/start-journal, 6-9
- file/start-transcript, 6-9
- file/stop-journal, 6-9
- file/stop-transcript, 6-9
- file/write-case, 6-4, E-2
- file/write-domains, 6-10
- file/write-mesh, 6-4, E-2
- File/Write/Boundaries..., 6-5
- File/Write/Domains..., 6-10
- File/Write/Mesh..., 6-4
- File/Write/Start Journal..., 6-8
- File/Write/Start Transcript..., 6-9
- File/Write/Stop Journal, 6-8
- File/Write/Stop Transcript, 6-9
- filenames, 5-6
- files, 6-1
  - append, 6-3
  - hardcopy, 6-17
  - importing from CAD packages, 6-11
  - journal, 6-8
  - log, 6-8
  - reading
    - compressed, 6-6
  - reading and writing, 6-1
    - compressed, 6-6
  - reading multiple boundary mesh, 3-7, 6-2
  - reading multiple mesh, 6-3
  - searching for, 3-7
  - selecting, 3-6
  - transcript, 6-9
  - writing
    - compressed, 6-7
- Filter Options panel, 6-14
- filters, 6-16, A-1
- finding worst face, 7-20
- fixed angle criteria, 7-42
- flipping normals, 7-76, 10-3, 10-28
- FLUENT, 1-2
- free
  - edges, 7-2
  - faces, 14-5
  - nodes, 7-2
- free nodes, 10-40
- GAMBIT, 1-2, 6-13, A-1
- getting started, 2-1
- global domain, 13-35
- graphical user interface (GUI), 3-1
  - customizing the, 3-17
- graphics
  - display windows, 3-14
  - Windows features, 3-15
  - hardcopy files, 6-17
  - window dumps, 6-20
- Grid Colors panel, 14-13
- Group Name panel, 7-73
- GUI, 3-1
  - customizing the, 3-17
- hardcopy
  - coloring, 6-19
  - file format, 6-18
  - file type, 6-19
  - options, 6-20
  - resolution, 6-19
  - saving files, 6-17
- Hardcopy panel, 6-21
- Heat Exchanger Mesh panel, 9-24
- Help, 3-19
- help
  - text interface, 5-10
- help keys, C-1
- hexahedron, 9-1
- hexcore
  - generation, 12-1
- Hexcore panel, 12-8
- Hexcore Refinement Region panel, 12-11
- high skewness, 10-41
- histogram
  - boundary face quality, 14-17
  - boundary face size, 14-17
  - cell quality, 14-19
  - cell size, 14-19

- hole filling, 8-4
- hot keys, C-2
- hybrid mesh, 9-1
  - merging duplicate nodes, 7-4
  - viscous, 9-2
  - zonal, 9-3
- HYPERMESH
  - export, 6-16
- HYPERMESH, 6-13
- l-deas, 6-12, A-1, A-2
- importing mesh files, 6-11
- Information dialog box, 3-5
- initial mesh
  - generating the, 11-2, 11-9
- integer entry, 3-11
- interrupt, 5-8
- Intersect Boundary Zones panel, 7-10
- intersecting
  - boundary zones, 7-5
- isolated nodes, 7-2, 9-9, E-6
- journal files, 6-8
- keyboard shortcuts, C-1
  - arrow keys, C-1
  - help keys, C-1
  - hot keys, C-2
- labels, 14-13, 14-22
- Laplacian smoothing, 13-2
- large jumps in prism height, 10-42
- left-handed faces, 10-41, 13-37, 14-6
- lights, 14-36
- Lights panel, 14-36
- list
  - drop-down, 3-14
  - multiple selection, 3-13
  - single selection, 3-12
- local refinement, 7-35, 11-13
- log files, 6-8
- magnifying the display, 14-46
- Make Periodic Boundaries panel, 7-90
- Manage Cell Zones panel, 13-28
- Manage Face Zones panel, 7-74
- manifold, 14-6
- manipulating
  - boundary nodes, 7-2
- manipulating cell zones, 13-26
- manual
  - access, 1-5
  - using the, UTM-1
- manual meshing, 11-6
- maximum cell length, 12-6
- menu bar, 3-3
- Merge Boundary Nodes panel, 7-2
- merging
  - boundary zones, 7-75
  - cell zones, 13-30
  - duplicate nodes, 7-3, 7-16
- mesh
  - append, 6-3
  - automatic tri/tet generation, 11-2
  - checking, 13-37
  - clearing, 13-37
  - display, 14-2
  - domains, 11-1, 13-33, E-5
  - file format, B-1
  - files
    - for FLUENT, 6-4
    - from CAD packages, 6-11
    - importing, 6-11
    - reading and writing, 6-1
    - reading multiple, 3-7, 6-2, 6-3
    - writing, 6-4
  - find worst face, 7-20
  - information, 15-15
  - orthogonality, 10-10
  - quality, 15-8
  - resolution, 15-9
  - size, 15-1
  - smoothing nodes, 13-2
  - surface repair, 11-6
  - write boundaries, 6-5
- mesh files
  - writing, 6-4
- mesh generation, 9-1

- automatic
  - hexcore, 12-1
  - hybrid meshes, 11-5
- basic steps, 2-1
- hexcore, 12-1
- hybrid, 9-2, 9-3, 9-5, 9-6, 13-33
  - viscous, 9-2
  - zonal, 9-3
- nonconformal, 9-8
- prisms, 10-1
- pyramids, 9-14
- strategies, 9-1
- tri/tet, 9-3, 9-6, 11-1
  - automatic, 11-2
  - example, 4-1
  - initialization, 11-9
  - manual, 11-6
  - multiple zones, 11-4
  - refinement, 11-12
- mesh improvement, 13-1
- Mesh/Auto Mesh..., 11-2, 11-4
- Mesh/Check, 13-37
- Mesh/Clear, 13-37
- mesh/clear-mesh, 13-38
- Mesh/Domains..., 13-33, 13-34
- Mesh/Hexcore..., 12-1, 12-8
- Mesh/Manage..., 13-26, 13-28
- Mesh/Prisms..., 10-1
- Mesh/Pyramids..., 9-14
- mesh/reset-mesh, 13-38
- Mesh/Tools/Auto Node Move..., 13-20
- Mesh/Tools/Cavity Remesh..., 13-22, 13-24
- Mesh/Tools/Cell Modify..., 13-15
- Mesh/Tools/Tet Improve..., 13-7
- Mesh/Tools/Tri/Tet Improve..., 13-2, 13-3, 13-9
- meshing
  - problems
    - pyramids, 9-20
    - tri/tet, 11-25
  - procedure
    - hybrid, 9-2, 9-3, 9-5, 9-6
    - pyramids, 9-14
    - tri/tet, 11-6
  - meshing problems
    - prisms, 10-39
  - meshing procedure
    - prisms, 10-2
  - Mirror Planes panel, 14-32
  - Modify Boundary panel, 7-22
  - Modify Cells panel, 13-15
  - mouse
    - buttons, 14-45
    - manipulation, 14-46, 14-48
    - probe, 14-46, 14-47
      - filter, 7-23, 14-9
      - function, 7-23, 14-9
      - select, 7-23, 14-9
  - Mouse Buttons panel, 14-45
  - Mouse Probe panel, 14-48
  - Move Nodes panel, 7-27
  - moving node, 7-17
  - multiple mesh files, 3-7, 6-2, 6-3
  - multiple selection list, 3-13
  - multiple zones, 11-4
  - multiply-connected, 14-5
  - naming zones, 7-75, 13-30
  - NASTRAN, 6-12, A-1, A-6
    - export, 6-16
  - negative cell volume, 10-41
  - negative volume, 10-41
  - node
    - boundary, 7-2
    - closeness, 11-22
    - clustering, 9-9
    - collapsing, 7-17
    - creation, 7-15
    - deletion, 7-16
    - duplicate, 7-2, 11-25
    - free, 7-2
    - isolated, 7-2, 9-9, E-6
    - merging, 7-16
    - move by, 7-17
    - move to, 7-17
    - moving, 7-17
    - radius, 15-16

- smoothing, 7-18
- unmeshed, 14-6, 15-1
- unused, 14-5
- nodes
  - deleting, 7-75
- Non Conformals panel, 9-22
- non-conformal meshes, 9-8
- non-manifold, 14-6
- normals
  - displaying, 14-10
  - flipping, 7-76, 10-3, 10-28
  - orienting, 7-76, 10-3, 10-28
  - smoothing, 10-17
- offset distance, 10-18
  - smoothing, 10-21
- offset scaling, 9-18
- online help, 3-19
- orientation, 10-40
- orienting
  - boundary faces, 7-76
  - normals, 7-76
- orienting normals, 10-3, 10-28
- orthogonality, 10-10
- orthographic view, 14-35
- Outer Box Zones panel, 12-10
- Page Setup panel, 3-16
- Pan Regions panel, 8-43
- panel layout, 6-24
- panels, 3-9
  - Annotate, 14-49
  - Auto Node Move, 13-20
  - Axes - Histogram, 14-22
  - Boundary Wrapper, 8-30
  - Bounding Box, 7-80
  - Bounding Frame, 14-44
  - Call Distribution, 14-20
  - Camera Parameters, 14-33
  - Cavity Remesh, 13-24
  - Create Boundary Zones, 7-27
  - Display Grid, 14-4
  - Display Options, 14-24
  - Display Properties, 14-41
  - Domains, 13-34
  - Face Distribution, 14-17
  - Feature Modify, 7-49
  - Grid Colors, 14-13
  - Hexcore, 12-8
  - Intersect Boundary Zones, 7-10
  - Lights, 14-36
  - Make Periodic Boundaries, 7-90
  - Manage Cell Zones, 13-28
  - Manage Face Zones, 7-74
  - Mirror Planes, 14-32
  - Modify Boundary, 7-22
  - Modify Cells, 13-15
  - Mouse Buttons, 14-45
  - Mouse Probe, 14-48
  - Pan Regions, 8-43
  - Plane Surface, 7-83
  - Project Face Zone, 7-70
  - Quality Measure, 15-13
  - Refine Boundary Zones, 7-37
  - Report Boundary Cell Limits, 15-7
  - Report Cell Limits, 15-5
  - Report Face Limits, 15-3
  - Report Mesh Size, 15-1
  - Scene Description, 14-38
  - Separate Face Zones, 7-67
  - Style Attributes, 14-15
  - Surface Retriangulation, 7-56
  - Trace Path, 8-44
  - Transformations, 14-42
  - Tri/Tet Improve, 13-9
  - Views, 14-30
  - Wrapper Refinement Region, 8-42
  - Write Views, 14-32
  - Zone Prefix, 7-87
  - Zone Selection Helper, 14-51
- categories, 3-9
- parent node, 10-18
- PATRAN, 6-12, A-1, A-4
  - export, 6-16
- periodic, 7-89
- periodic shadow, 7-89
- perspective view, 14-35



- planar points method, 7-81
- planar surface
  - axis direction method, 7-81
  - planar points method, 7-81
- plane surface
  - creating, 7-81
- Plane Surface panel, 7-83
- plot axes, 14-21
- plotting
  - cell distribution, 14-19
  - face distribution, 14-17
- polyhedra, 6-4
- post improve
  - automatic improvement, 8-28
  - improving quality, 8-26
  - inflating thin regions, 8-22
  - recovering a single surface, 8-29
  - recovering zones, 8-26
  - remove duplicate nodes, 8-21
  - remove self intersection, 8-24
  - removing crossovers, 8-30
  - renaming zones, 8-27
  - rezoning faces, 8-27
  - smoothing, 8-21
  - smoothing folds, 8-22
- post wrap
  - coarsening, 8-18
  - deleting islands, 8-25
  - swapping, 8-25
- preserving cell zones, 11-1
- Print panel, 3-15
- prism, 9-1
  - cap faces, 10-11, 10-12
  - collision detection, 10-7
  - dangling walls, 10-6
  - generation, 10-1
    - details, 10-12
    - from multiple boundary zones, 10-5
    - new zones created during, 10-11
  - growth direction, 10-3, 10-15, 10-27
  - height, 10-24
  - meshing problems, 10-39
    - growing too far, 10-42
    - high skewness, 10-41
    - large jumps in prism height, 10-42
    - left-handed faces, 10-41
    - negative volume, 10-41
    - orientation, 10-40
    - retriangulation failure, 10-40
    - too few nodes, 10-40
    - too many nodes, 10-40
    - unknown face combinations, 10-40
  - orthogonality, 10-10
  - proximity detection, 10-7
  - side faces, 10-11
  - two-sided walls, 10-6
- prism meshing problems, 10-39
  - free nodes, 10-40
  - growing too far, 10-42
  - high skewness, 10-41
  - large jumps in prism height, 10-42
  - left-handed faces, 10-41
  - negative volume, 10-41
  - orientation, 10-40
  - retriangulation failure, 10-40
  - too few nodes, 10-40
  - too many nodes, 10-40
  - unknown face combinations, 10-40
- Prisms Growth Options panel, 10-32
- Prisms panel, 10-23
- problems
  - prism meshing, 10-39
- program
  - capabilities, 1-4
- program capabilities, 1-4
- program structure, 1-2
- Project Face Zone panel, 7-70
- projection, 10-13
- pull-down menu, 3-4
- pyramid, 9-1
  - generation, 9-14
    - new zones created during, 9-16
  - problems, 9-20
  - meshing problems, 9-20
  - side faces, 9-16
- pyramids

- cap faces, 9-16
- Pyramids panel, 9-17
- quadrilateral, 9-1
- quality, 15-8
  - cell, 14-8, 14-20
  - face, 14-6, 14-17
  - measures, 15-8
    - specifying, 15-13
  - mesh, 15-8
  - plotting
    - cell distribution, 14-19
    - face distribution, 14-17
  - reporting, 15-3, 15-5, 15-6
- Quality Measure panel, 15-13
- quality measures, 15-9
  - aspect ratio, 15-9
  - clustering, 15-9
  - dihedral angle, 15-13
  - edge ratio, 15-12
  - size change, 15-12
  - skewness, 15-10
  - smoothness, 15-9
  - squish, 15-12
  - warp, 15-13
- query functions, D-1
- Question dialog box, 3-6
- radio buttons, 3-11
- raster file, 6-19
- reading
  - mesh files
    - compressed, 6-6
- reading and writing files, 6-1
- real number entry, 3-12
- Refine Boundary Zones panel, 7-37
- refinement regions, 11-13
- refining, 11-2, 11-12
  - automatically, 11-2
  - locally, 7-35, 11-13
  - manually, 11-12
  - triangular boundary faces, 7-35
- remeshing boundary zones, 7-53
- remote execution, 2-2
- removing duplicate nodes, 8-21
- renaming zones, 7-75, 13-30
- Report Boundary Cell Limits panel, 15-7
- Report Cell Limits panel, 15-5
- Report Face Limits panel, 15-3
- Report Mesh Size panel, 15-1
- Report/Boundary Cell Limits..., 15-6
- Report/Cell Limits..., 15-5
- Report/Face Limits..., 15-3
- Report/Mesh Size..., 15-1
- report/print-info, 15-15
- Report/Quality Measure..., 15-13
- reporting, 15-1
  - aspect ratio
    - boundary cell, 15-6
    - cell, 15-5
    - face, 15-3
  - change in size
    - boundary cell, 15-6
    - cell, 15-5
    - face, 15-3
  - mesh information, 15-15
  - mesh size, 15-1
  - quality
    - boundary cell, 15-6
    - cell, 15-5
    - face, 15-3
  - size
    - boundary cell, 15-6
    - cell, 15-5
    - face, 15-3
  - skewness
    - boundary cell, 15-6
    - cell, 15-5
    - face, 15-3
- resolution, 15-9
- retriangulation, 10-13, 10-14
- retriangulation failure, 10-40
- rotating
  - the display, 14-46
  - zones, 7-76
- rotating zones, 13-30
- sample session, 4-1

- saving
  - domain files, 6-10
  - hardcopy files, 6-17
  - mesh files, 4-11, 6-1
  - panel layout, 6-24
- scale (in a GUI panel), 3-13
- scaling zones, 7-76, 13-30
- scene description, 14-38
- Scene Description panel, 14-38
- Scheme, 1-1, 5-1, 5-4, 5-5, 5-9
  - loading source files, 6-7
- search pattern, 3-7
- Select File dialog box, 3-6
- selecting files, 3-6
- separate face zones
  - based on shape, 7-64
  - using angle, 7-63
  - using marked cells, 7-66
  - using neighboring cell zones, 7-64
  - using regions, 7-63
  - using seed element, 7-64
- Separate Face Zones panel, 7-67
- separating boundary zones, 7-63
- shadow, 7-89
- shortcut keys, C-1
  - arrow keys, C-1
  - help keys, C-1
  - hot keys, C-2
- shrinking elements, 14-11
- side faces, 9-16, 10-11
- single selection list, 3-12
- size
  - cell, 14-8
  - change in, 15-9
  - face, 14-6
  - plotting cell distribution, 14-19
  - plotting face distribution, 14-17
- size change, 15-12
- skewness, 4-8, 11-22, 15-10
  - cell, 14-8, 14-20
  - face, 14-6, 14-17
  - plotting cell distribution, 14-19
  - plotting face distribution, 14-17
- sliver, 13-6
  - removal, 13-6
- smoothing
  - Laplacian, 13-2
  - normals, 10-17
  - skewness-based, 13-2
  - variational, 13-2
- smoothing nodes, 13-2
- smoothness, 7-35, 15-9
- squish, 15-12
- starting TGrid, 2-2
  - on a remote machine, 2-2
- STL, 6-13
- strings, 5-5
- Style Attributes panel, 14-15
- Surface Retriangulation panel, 7-56
- swapping, 13-3
- sweep surface
  - creating, 7-87
- Swept Surface panel, 7-88
- symbols, 5-6, 14-16
- system commands, 5-8
- terminal emulator, 3-2
- tetrahedral mesh generation, 11-1
- tetrahedron, 9-1
- TetraMesher, A-1
- text
  - annotation, 14-47
  - entry, 3-11
  - prompts, 5-4
  - userinterface, 5-1
- TGrid, 1-2
  - capabilities, 1-4
- .tgrid file, 6-24
- tgrid -help, 2-4
- tmerge
  - append files, 6-3
- too few nodes, 10-40
- too many nodes, 10-40
- Trace Path panel, 8-44
- transcript files, 6-9
- Transformations panel, 14-42
- transforming objects in a scene, 14-42

- translating the display, 14-46
- translating zones, 7-76, 13-30
- Tri/Tet Improve panel, 13-9
- Tri/Tet Init Controls panel, 11-19
- tri/tet meshing
  - refinement
    - controls, 11-12
    - refinement controls, 11-12
- Tri/Tet panel, 11-17
- Tri/Tet Refine Controls panel, 11-20
- Tri/Tet Refinement Region panel, 11-22
- triangle, 9-1
- triangular mesh generation, 11-1
- Triangulate Zones panel, 7-62
- TUI, 5-1
  
- unknown face combinations, 10-40
- unmeshed
  - faces, 14-6, 15-1
  - nodes, 14-6, 15-1
- unused nodes, 14-5
- User Defined Groups panel, 7-71
- user interface, 3-1
  - graphical, 3-1
  - text, 5-1
- using Auto Mesh
  - tri/tet meshing, 11-4
- using the manual, UTM-1
  
- vector file, 6-19
- views, 14-30
- Views panel, 14-30
- virtual zone, 13-26
- viscous hybrid mesh, 9-2
- visibility, 14-40
  
- Warning dialog box, 3-5
- warp, 15-13
- wedge, 9-1
- window dumps, 6-20
- windows, 3-14
- Windows systems
  - graphics display window features, 3-15
- Working dialog box, 3-5
  
- worst face, 7-20
- wrapper, 8-1
  - applications, 8-2
  - automatic improvement, 8-28
  - checking quality, 8-17
  - coarsening, 8-18, 8-37
  - deleting islands, 8-25
  - duplicate nodes, 8-21
  - examining
    - Cartesian grid, 8-11
    - geometry, 8-4
  - hole filling, 8-4
  - improving quality, 8-26, 8-37
  - inflating thin regions, 8-22, 8-37
  - prewrapping operations, 8-4
  - recovering a single surface, 8-29
  - recovering zones, 8-26, 8-37
  - removing
    - crossovers, 8-30, 8-37
    - duplicate, 8-37
    - self-intersection, 8-37
  - removing self intersection, 8-24
  - renaming zones, 8-27
  - reports, 8-17
  - rezoning faces, 8-27
  - smooth folded, 8-37
  - smoothing, 8-21
  - smoothing folds, 8-22
  - swapping, 8-25
  - working, 8-1
- Wrapper Refinement Region panel, 8-42
- wrapping
  - boundaries, 8-1
  - process, 8-2
- Write Boundaries panel, 6-5
- Write Views panel, 14-32
- writing
  - mesh files, 6-4
    - compressed, 6-7
- writing case files
  - polyhedra, 6-4
- XY plots, 14-21

- zonal hybrid mesh, 9-3
- Zone Prefix panel, 7-87
- Zone Selection Helper panel, 14-51
- zones, 7-74
  - active, 11-24, 13-28, 14-4
  - changing type, 7-74, 13-29
  - copying, 13-27, 13-29
  - creating new, 7-16, 13-29
  - deleting, 13-29
  - merging, 13-30
  - moving, 13-27
  - multiple, 11-7
  - projecting, 7-69
  - remeshing, 7-53
  - renaming, 7-75, 13-30
  - rotating, 7-76, 13-30
  - scaling, 7-76, 13-30
  - separating, 7-63
  - translating, 7-76, 13-30
- zooming, 14-46